

• Headlight Replacement

To remove the headlight bulb for replacement, proceed as follows:

1. Remove the two headlight attaching screws and remove the headlight from the headlight case.
2. Turn the headlight socket ① to "OFF" position and remove it with the headlight bulb, from the headlight.
3. Remove the headlight bulb ② from the headlight socket.
4. To install, reverse the removal procedures.

