

# Air Cleaner

---

9. Attach the air cleaner to its metal body.
10. Clean the inside of the air cleaner housing.
11. Apply a thin coat of grease to the sealing surface of the air cleaner assembly.
12. Install the air cleaner assembly.
13. Install the air cleaner housing cover.
14. Install the left side cover.

## More About: Air Cleaner

- Service the air cleaner more frequently if you ride in unusually wet or dusty areas. Your Honda dealer can help you determine the correct service interval for your riding conditions.
- Use the Honda genuine air cleaner specified for your model. Other air cleaners not specified for your model may not filter impurities properly and may cause premature engine wear or performance problems.