


Clutch System

Refer to *Safety Precautions* on page 43.

Clutch Freeplay

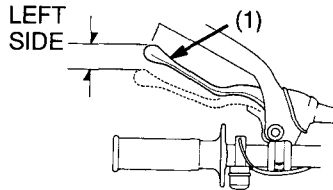

(1) clutch lever

Inspection

Check freeplay.

Freeplay: 10–20 mm (3/8 - 3/4 in)

If necessary, adjust to the specified range.

Adjustment

Adjust freeplay in the following order until the standard range is obtained:

- upper clutch assembly adjuster
- lower clutch cable adjuster
- clutch adjuster (on clutch housing)