


Suspension


2. Check the security of all handlebar and fork mounting bolts (1) (2). If any front suspension components appear worn or damaged, see your authorized Honda dealer for further inspection.

Rear Suspension Inspection

LEFT
SIDE

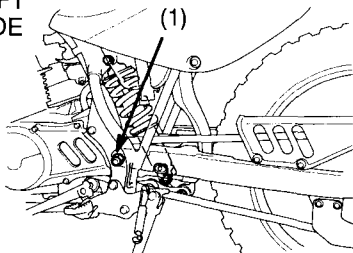

(1) swingarm bushing

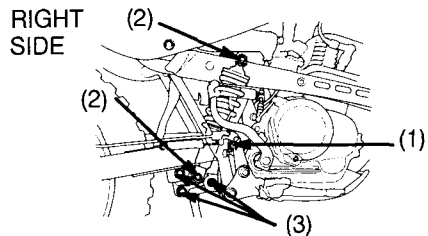

- (1) swingarm bushing
(2) shock absorber attachment points
(3) suspension linkage attachment points

1. Check the swingarm bushings (1). Place the motorcycle on a maintenance stand. Push hard against the side of the rear wheel and feel for any side-to-side looseness in the bushings.
2. Check that the fasteners for the shock absorber attachment points (2) and rear suspension linkage attachment points (3) are secure.