

Wheels

Take care to prevent getting grease, oil, or dirt on the brake shoe surfaces. This can cause poor brake performance or rapid brake shoe wear after reassembly.

Installation


1. Reverse the removal procedure.
Make sure the lug (5) on the fork leg is located in the slot (6) in the brake panel.
2. Torque the axle nut to:
63 N·m (6.3 kg-m, 46 ft-lbs)
3. Check front brake adjustment (page 80).

If a torque wrench was not used to install the wheel, see your Honda dealer as soon as possible to verify

proper assembly. Improper assembly may lead to loss of braking capacity.

Rear Wheel Removal

RIGHT REAR

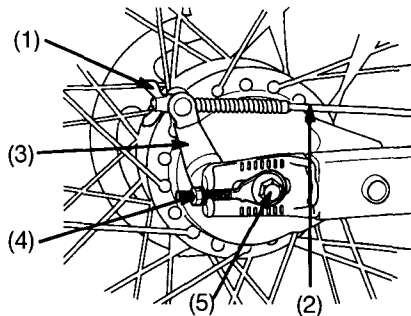

- | | |
|---------------|-------------------|
| (1) adjuster | (4) adjusting nut |
| (2) brake rod | (5) axle nut |
| (3) brake arm | |