

If pinging or spark knock occurs at a steady engine speed under normal load, change brands of gasoline. If pinging or spark knock persists, consult your Honda dealer.


We recommend that you use unleaded fuel because it produces fewer engine deposits and extends the life of exhaust system components.

Never use stale or contaminated gasoline or an oil/gasoline mixture. Avoid getting dirt, dust, or water in the fuel tank.

Refueling Procedure

Fuel Tank Capacity, including reserve:
6.5 ℓ (1.72 US gal, 1.43 Imp gal)

Reserve Capacity:
0.9 ℓ (0.24 US gal, 0.20 Imp gal)

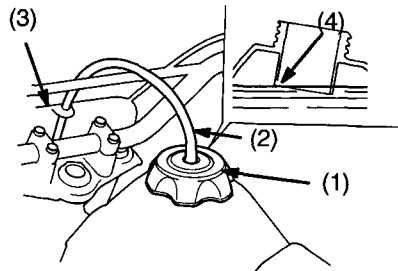

- | | |
|-------------------|------------------------|
| (1) fuel fill cap | (3) front number plate |
| (2) breather tube | (4) filler neck |