

## ENGINE OIL

### Engine Oil Level Check


Check the engine oil level each day before operating the motorcycle.

The oil filler cap/dipstick (1) is at the front of the right crankcase cover and contains a dipstick for measuring the oil level. Oil level must be maintained between the upper (2) and lower (3) level marks on the oil filler cap/dipstick.

1. Hold the motorcycle on firm level ground.
2. Start the engine and let it idle for a few minutes.
3. Stop the engine. After a few minutes, remove the oil filler cap/dipstick and wipe it clean, then reinsert the dipstick without screwing it in.

The oil level should be between the upper and lower level marks on the oil filler cap/dipstick.

4. If required, add the specified oil up to the upper level mark. Do not overfill.
5. Reinstall the oil filler cap/dipstick. Check for oil leaks.

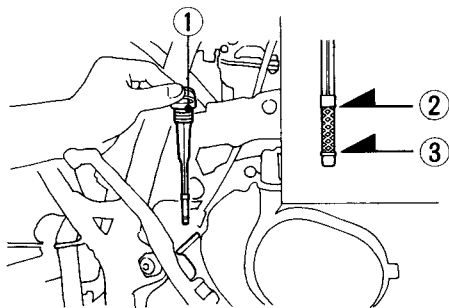

(1) Oil filler cap/dipstick (3) Lower level mark  
(2) Upper level mark