


### Installation Notes:

- To install the rear wheel, reverse the removal procedure.
- Make sure that the lug (6) on the swingarm is located in the slot (7) in the brake panel (8).
- Torque the following bolts:

Axle nut torque:

95 N·m (9.5 kg-m, 69 ft-lb)

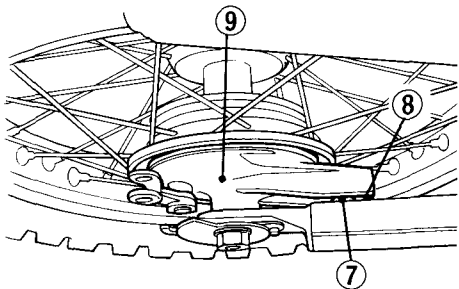

(6) Lug    (7) Slot    (8) Brake panel

- Position the brake arm correctly.
- Adjust the rear brake (page 19) and drive chain (page 60)
- Apply the brake several times and check for free wheel rotation when released.

### **⚠ WARNING**

- \* **If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly.**