

## Rear Suspension

The rear shock rebound damping and spring preload can be adjusted for rider weight and riding conditions.

### Rebound damping:

There are four rebound damping adjustment positions. Turn the damping adjuster (1) at the lower end of the shock for rider weight and riding conditions. The adjuster is marked for each adjustment position.


Standard position: 2

Full soft position: 1

Full hard position: 4

### NOTE:

- \* Be sure the damping adjuster is not between positions but is located in a detent.

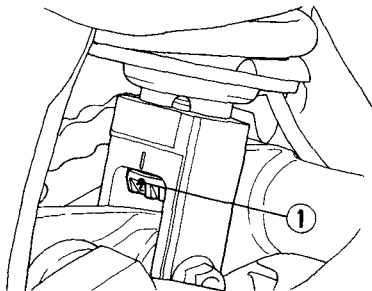

(1) Damping adjuster