


3. If the rear tyre skids instead of turning over the engine, pull the decompressor lever. Releasing compression allows the rear wheel to roll while turning the engine over.
4. Release the decompressor lever. If the engine does not start, pull the decompressor lever again. Wait until the motorcycle gains speed and release the decompressor lever.

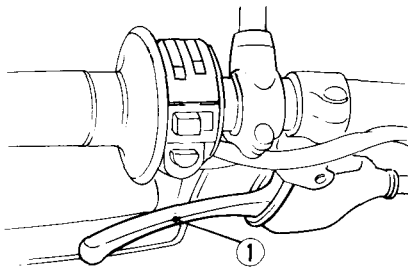

(1) Decompressor lever

RUNNING-IN

During the first week of operation (about 350 km, 200 mi), avoid full throttle use and never labour the engine. Do not operate at any one speed for prolonged periods.

During initial running-in newly machined surfaces will be in contact with each other and these surfaces will wear in quickly. Running-in maintenance at 350 km (200 miles) is designed to compensate for this initial minor wear. Timely performance of the running-in maintenance will ensure optimum service life and performance from the engine.