


3. Pull back the rubber cover (5).
Remove the set spring (6) and disengage
the socket (7) from the headlight (8).
Slightly press the headlight bulb (9) and
turn it counterclockwise.

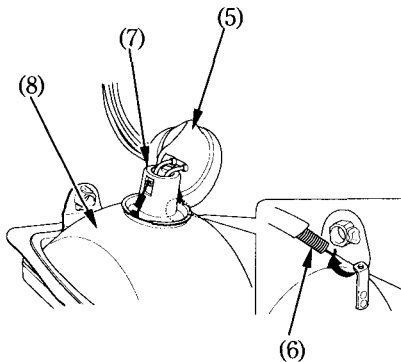


(5) Rubber cover
(6) Set spring

(7) Socket
(8) Headlight

4. Install a new bulb in the reverse order. --
removal.

NOTE:

- When installing the bulb, align the tab on the socket with the groove in the headlight.

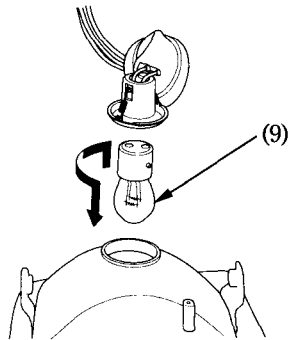

(9) Headlight bulb