


Compression Damping:

This adjustment affects how quickly the fork compresses. The fork compression damping adjuster (1) has 14 positions (clicks) or more. Turning the adjuster screw one full turn changes the adjuster 4 positions. To adjust the adjuster to the standard position, proceed as follows:

1. Turn the damping adjuster clockwise until it will no longer turn (lightly seats). This is the full hard setting.
2. Turn the damping adjuster counterclockwise 8 positions back from full hard. This is standard position.
3. Make sure that both fork legs are adjusted to the same position.

Always start with the full hard position when adjusting damping.

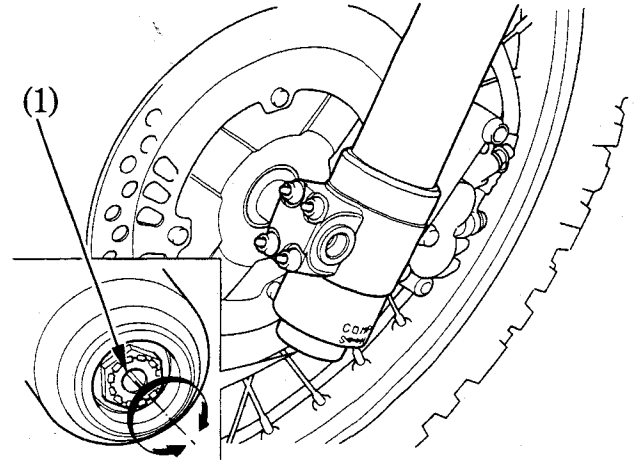

(1) Damping adjuster