

Rear Suspension

The rear suspension can provide the desired ride under various rider weight and riding conditions through adjustments of the rebound damping, compression damping and spring preload adjuster.

Use the following chart to determine the correct adjustment for you.

The rear shock absorber assembly includes a damper unit that contains high pressure nitrogen gas. Do not attempt to disassemble or service the damper; it cannot be rebuilt and must be replaced when worn out. Disposal should only be done by your Honda dealer. The instructions found in this owner's manual are limited to adjustment of the shock assembly only.