


5. Remove the dipstick. The oil level should be between the upper (1) and lower (2) level marks on the dipstick. If required, add the specified oil (see page 77) up to the upper level mark. Do not overfill.

NOTICE

Running the engine with insufficient oil pressure may cause serious engine damage.


6. Reinstall the oil filler cap/dipstick. Check for oil leaks.

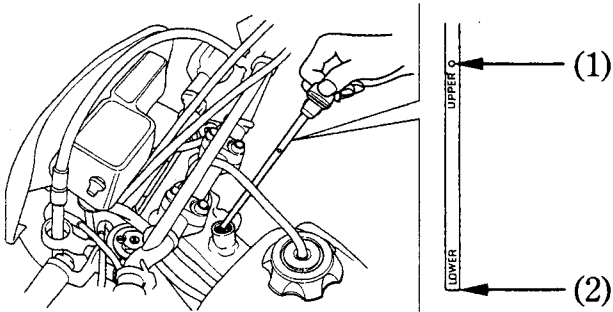

(1) Upper level mark (2) Lower level mark

The engine contains a crankcase oil level check bolt (4). Remove the bolt and check that the level is flush with the lower edge of the hole.

If it is, start the engine and check the engine oil level. If the crankcase oil level is low, add the recommended engine oil before starting the engine to check the engine oil level.

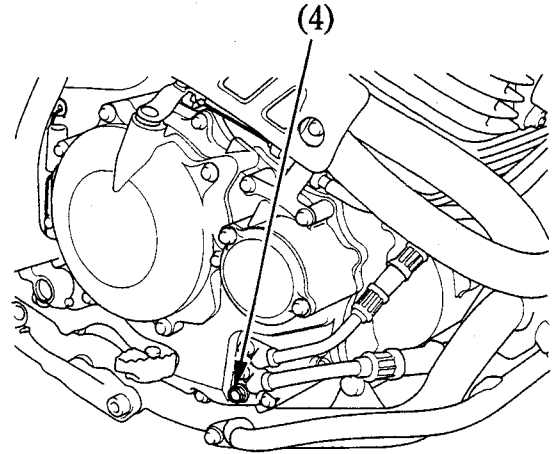

(4) Crankcase oil level check bolt