

9. Clutch—check operation, and adjust if necessary (pages 32 – 33 ).
10. Lights and horn—check that headlight, tail/brake light, turn signals, indicators and horn function properly.
11. Spark plug and high tension terminal — check for looseness.
12. Engine stop switch—check for proper function (page 45 ).
13. Nuts, bolts, fasteners — check the front wheel to see that the axle nut and axle holder nuts are tightened securely. Check security of all other nuts, bolts, and fasteners.