


AIR CLEANER

Refer to the Safety Precautions on page 66 .

The air cleaner should be serviced at regular intervals (page 68). Service more frequently when riding in unusually wet or dusty areas.


1. Lift the D-ring on each quick-release fastener (1) and turn it counterclockwise until it releases. Open the air cleaner housing cover (2) .

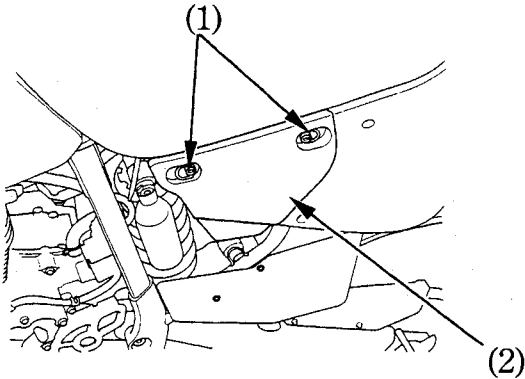

- (1) Quick-release fastener
- (2) Air cleaner housing cover

2. Unhook the set spring (3) .
3. Remove the air cleaner (4) .
4. Wash the air cleaner in clean, nonflammable or high flash point solvent and let it dry thoroughly.

Never use petrol or low flash point solvents for cleaning the air cleaner. A fire or explosion could result.

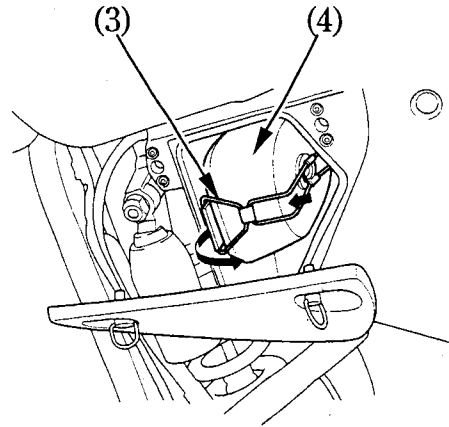

- (3) Set spring
- (4) Air cleaner