
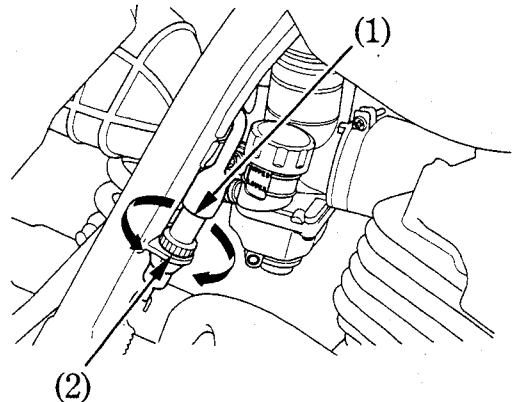


STOPLIGHT SWITCH ADJUSTMENT

Refer to the Safety Precautions on page 66 .

Check the operation of the stoplight switch (1) at the right side behind the engine from time to time.

Adjustment is done by turning the adjusting nut (2).

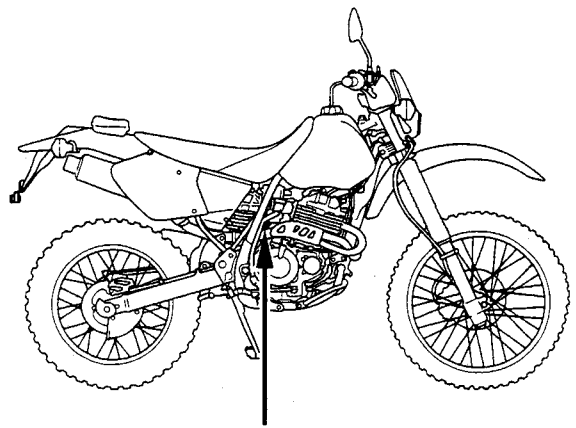

(1) Stoplight switch

(2) Adjusting nut