

TYRES

Proper air pressure will provide maximum stability, riding comfort and tyre life.

Check tyre pressure frequently and adjust if necessary.

NOTE:

* Tyre pressure should be checked before you ride while the tyres are “cold”.

On/off-road tyres are standard on this model. Select the right replacement tyres in accordance with the following specifications.

Check the tyres for cuts, embedded nails, or other sharp objects. See your Honda dealer for replacement of damaged tyres or punctured inner tubes.

		Front	Rear
Tyre size		90/90 – 21 54H	140/80 R17 69H
Cold tyre pressures kPa (kgf/cm ² , psi)	Rider only	200 (2.0 , 29)	200 (2.0 , 29)
	Rider and passenger	200 (2.0 , 29)	250 (2.50 , 36)
Tyre brand	BRIDGESTONE	TW101	TW152 RADIAL
	MICHELIN	T66	T66X