

## **Easy maintenance**

After adjusting, check the gap between the adjuster and the pin by pushing the brake arm inwards.

Check the level of play after carrying out the adjustment process.

For further details check with your HONDA dealer.

Check with your HONDA dealer if the level of play exceeds the adjustable range.

