

Inspecting the clutch

< Lever play >

Pull in the clutch lever until resistance can be felt. Measure the play and confirm that the play is within the specified range by using a ruler.

Clutch lever play: 10-20 mm

Adjust the play if it is over the specified range. Refer to next page for adjustment.

