



### Odometer

Shows accumulated mileage.

 
If the mileage is under 100,000 km, the mileage will show in the display.

If the mileage is over 100,000 km, the highest digit of the total mileage shows briefly before showing the remaining digits in the display.

### Fuel gauge

Remaining fuel when only 1st (E) segment left: approximately 1.3 litres (0.34 US gal, 0.29 Imp gal). This segment flashes when the fuel decreases further.

**If the fuel gauge indicator flashes in a repeat pattern or turns off:**  P.81



(If the mileage is over 200,000 km)

