

Starting the Engine

Start your engine using the following procedure, regardless of whether the engine is cold or warm.

This scooter is equipped with a side stand ignition cut-off system.

- ▶ If the side stand is down, the engine cannot be started.
- ▶ If you lower the side stand with the engine running, it will automatically shut off.

NOTICE

- If the engine does not start within 5 seconds, turn the ignition switch to the **○** (Off) position and wait 10 seconds before trying to start the engine again to recover battery voltage.
- Extended fast idling and revving the engine can damage the engine, and the exhaust system.
- The engine will not start if the throttle is fully open.

Consult your dealer for advice if you plan to ride your scooter at an altitude above 2,500 m (8,000 feet).

NOTICE

If the scooter is transported to a place 2,000 m (6,500 feet) higher or lower than the start point, you may not be able to achieve sufficient engine performance at the new altitude. Consult your dealer before transporting your scooter.