

Starting the Engine *(Continued)*

If you cannot restart a warm engine:

- ① Place the scooter on its centre stand and set the rear brake lock.
- ② Rotate the throttle $1/8$ - $1/4$ turn while starting the engine.

