
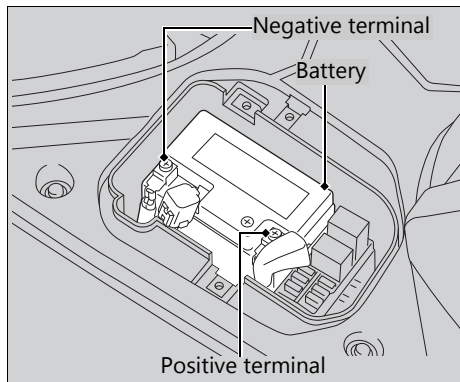


Battery

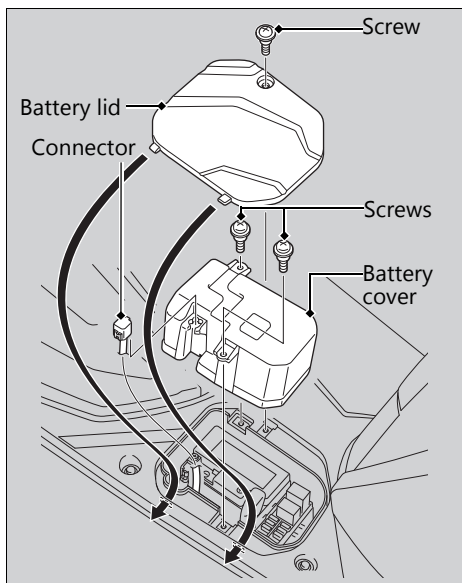

Removal

Make sure the ignition switch is in the **O** (Off) position.

1. Remove the battery lid and the battery cover from the step floor by removing the screws.