


Front Turn Signal Bulb

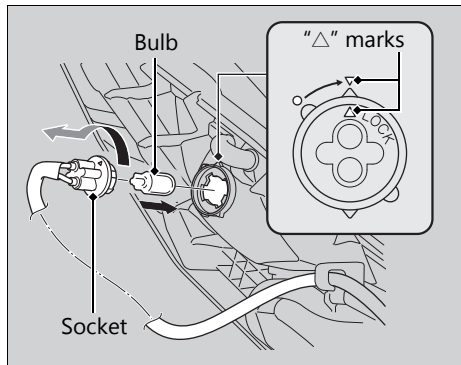

1. Remove the front top cover. ► P. 60
2. Remove the front cover. ► P. 59
3. Turn the socket counterclockwise and pull it out.
4. Pull out the bulb without turning it.
5. Install a new bulb and parts in the reverse order of removal.
 - Use only the amber bulb.
 - Make sure that the "△" marks on the socket and front turn signal housing are aligned.