


Battery Cover

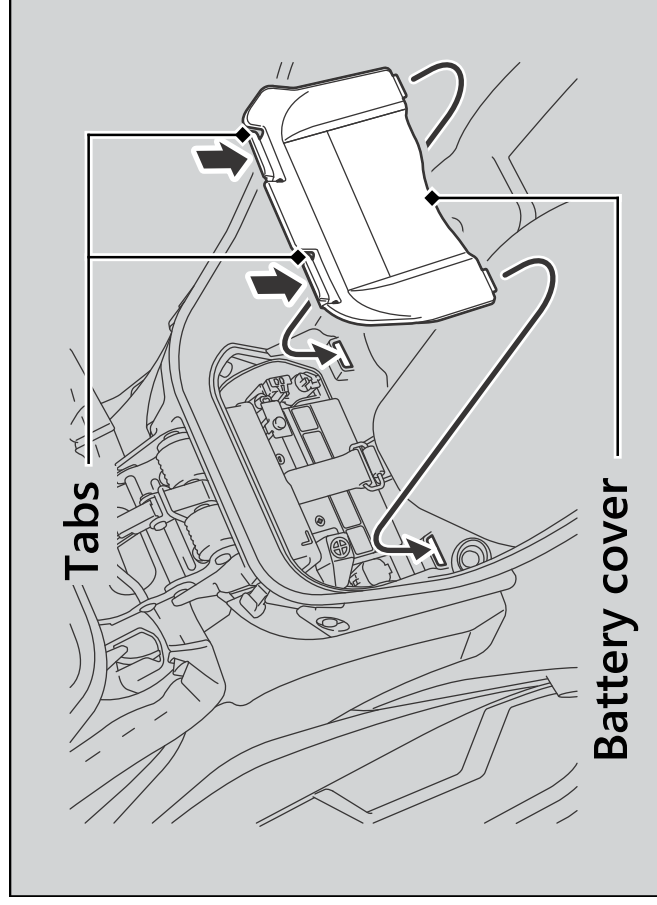

■ Removal

1. Open the seat. ► P. 60
2. Press the tabs and remove the battery cover.

■ Installation

Install the parts in the reverse order of removal.