

## Starter Motor Operates But Engine Does Not Start

---

Check the following items:

- Check the correct engine starting sequence. ➔ P. 50
- Check that there is petrol in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
  - ▶ If the indicator lamp is on, contact your dealer as soon as possible.

## Starter Motor Does Not Operate

---

Check the following items:

- Check the correct engine starting sequence. ➔ P. 50
- Check for a blown fuse. ➔ P. 112
- Check for a loose battery connection (➔ P. 79) or battery terminal corrosion (➔ P. 70).
- Check the condition of the battery. ➔ P. 111

If the problem continues, have your vehicle inspected by your dealer.