


Blown Fuse

Before handling fuses, see "Inspecting and Replacing Fuses." ► P. 72

Fuse Box Fuses

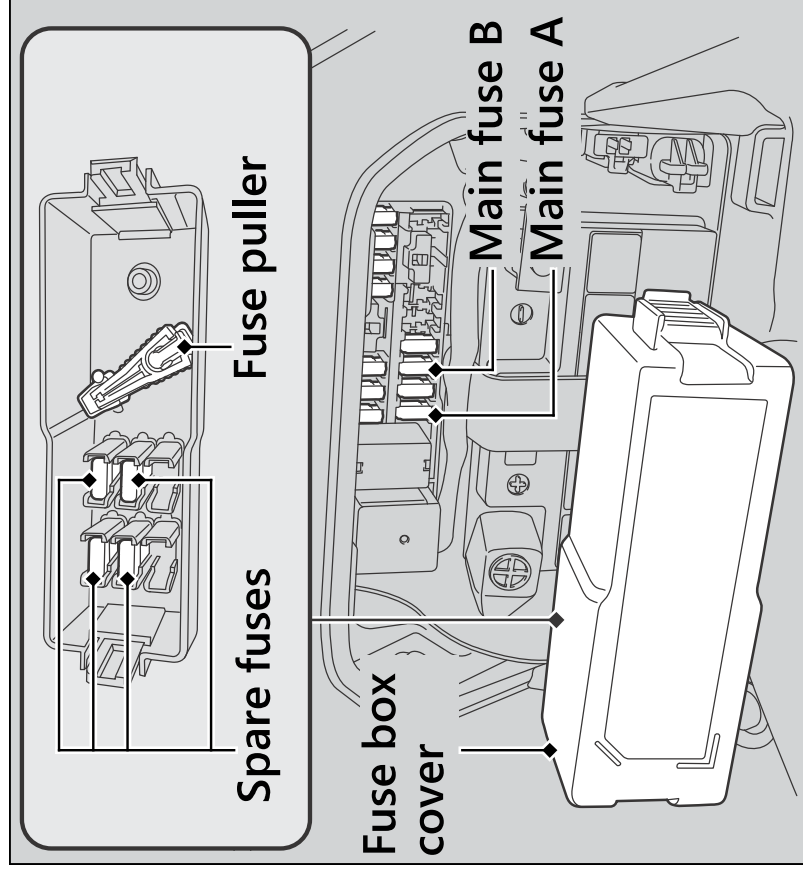

1. Remove the battery cover. ► P. 80
2. Open the fuse box cover.
3. Pull the main fuse and other fuses out one by one with the fuse puller located inside of the fuse box cover. Check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
4. Install the fuse box cover.
5. Install the battery cover.

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your vehicle inspected by your dealer.