

# MAINTENANCE SCHEDULE

The maintenance intervals shown in the following schedule are based upon average riding conditions. ATC's subjected to severe use, or ridden in wet or unusually dusty areas, require more frequent servicing. Items marked \* should be serviced by an authorized Honda dealer, unless the owner has the proper tools and is mechanically proficient. Other maintenance items are simple to perform and may be serviced by the owner.

Perform the PRE-RIDE INSPECTION in the Owner's Manual at each scheduled maintenance period.

I: Inspect, Clean, Adjust, Lubricate or Replace, if necessary.

C: Clean

R: Replace

A: Adjust

L: Lubricate

	ITEM		INITIAL SERVICE PERIOD (First week of operation)	REGULAR SERVICE PERIOD (Every 30 operating days)
	ENGINE OIL	NOTE (1), (2)	R	R
*	ENGINE OIL FILTER SCREEN		C	C
*	ENGINE OIL FILTER ROTOR			C
	AIR CLEANER ELEMENT	NOTE(2)		I
	SPARK PLUG			I
	BATTERY		I	I
*	VALVE CLEARANCE		I	I
*	CAM CHAIN TENSIONER		A	A
*	CARBURETOR		I	I
	FUEL LINE		I: (EVERY YEAR)	
*	FUEL FILTER		C: (EVERY YEAR)	
	THROTTLE OPERATION		I	I
	DRIVE CHAIN	NOTE (2)	I,L	I,L
*	FRONT & REAR BRAKE SHOES	NOTE (3)	I: (EVERY YEAR)	
	FRONT & REAR BRAKE SYSTEM		I	I
*	CLUTCH		A	A
*	SPARK ARRESTER			C
	ALL NUTS, BOLTS, FASTENERS		I	I
	LIGHTING EQUIPMENT		I	I
	TIRES		I	I
*	STEERING HEAD BEARINGS		A: (EVERY YEAR)	

- NOTES: (1) Replace every 30 operating days or every 3 months, whichever comes first.  
 (2) Service more frequently when riding in dusty areas, sand or snow.  
 (3) Service more frequently after riding in very wet or muddy conditions.