

MAINTENANCE


FRONT BRAKE

Check the cable and brake lever for loose connections, excessive play, or other damage. Replace or repair if necessary.

Disconnect the brake cable at the upper end. Thoroughly lubricate the cable and pivot point with a commercially available cable lubricant to prevent premature wear.

Install the brake cable.


Make sure brake lever free play is 15–20 mm (5/8–3/4 in) at the brake lever tip.

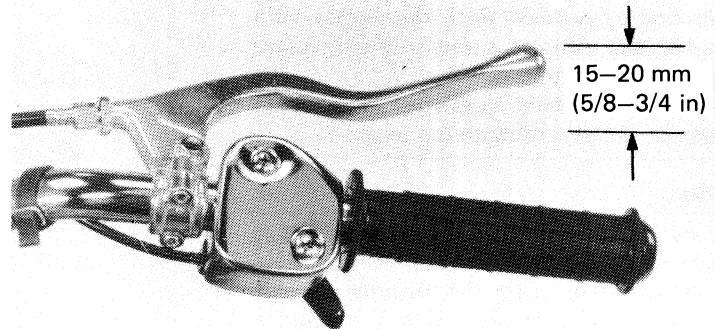

Adjust free play by turning the adjusting nut.

NOTE

Make sure the cut-out of the adjusting nut is seated on the brake arm pin.

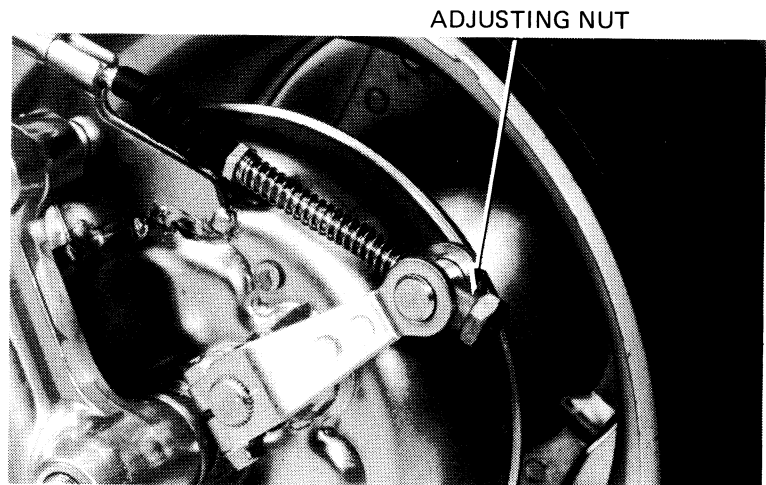

REAR BRAKE

Check the cable, brake lever and brake pedal for loose connections, excessive play, or other damage. Replace or repair if necessary.

Disconnect the brake cables at the brake lever or pedal ends. Thoroughly lubricate the cables and their pivot points with a commercially available cable lubricant to prevent premature wear.

Install the cables.

Measure the brake pedal free play at the end of the brake pedal.

BRAKE PEDAL FREE PLAY:
15–20 mm (5/8–3/4 in)

