


Measure the rear brake lever (parking brake) free play at the end of the brake lever.

**REAR BRAKE LEVER FREE PLAY:**  
15–20 mm (5/8–3/4 in)

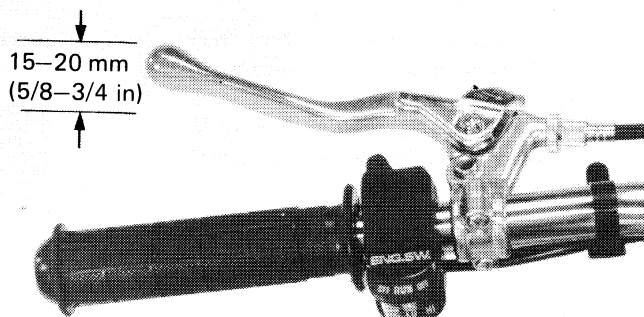

Adjust the lever and pedal free play by turning the adjusters at the lower end of the cables.

**NOTE**

Make sure the cut-out of each adjuster is seated on the brake arm pin.



**CLUTCH**

Stop the engine.  
Loosen the clutch adjusting screw lock nut.

Slowly turn the adjusting screw counterclockwise until resistance is felt.

Then turn the adjusting screw clockwise 1/4 turn, and tighten the lock nut.

After adjustment, start the engine and check for proper clutch operation.

