



FUEL SYSTEM

Loosen the choke cable clamp screw and disconnect the choke cable from the carburetor.
Remove the two carburetor mounting nuts and the carburetor.

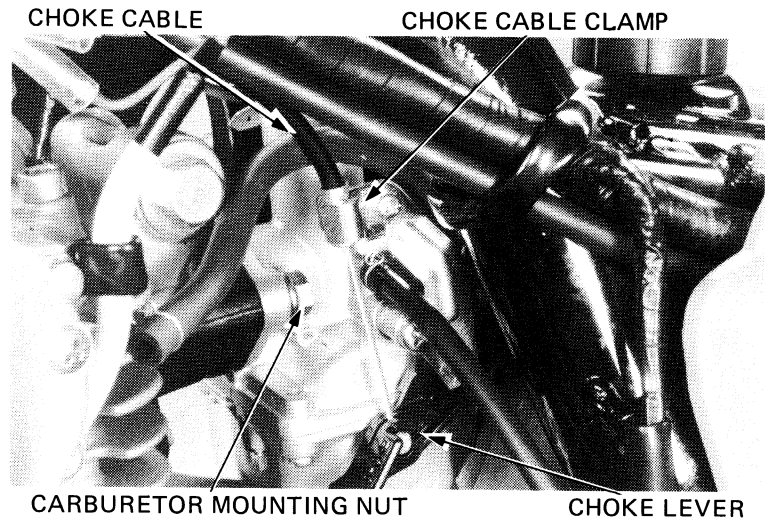

FLOAT, FLOAT VALVE AND JETS

Remove the float chamber body.
Remove the float arm pin with pliers.
Remove the float and float valve.

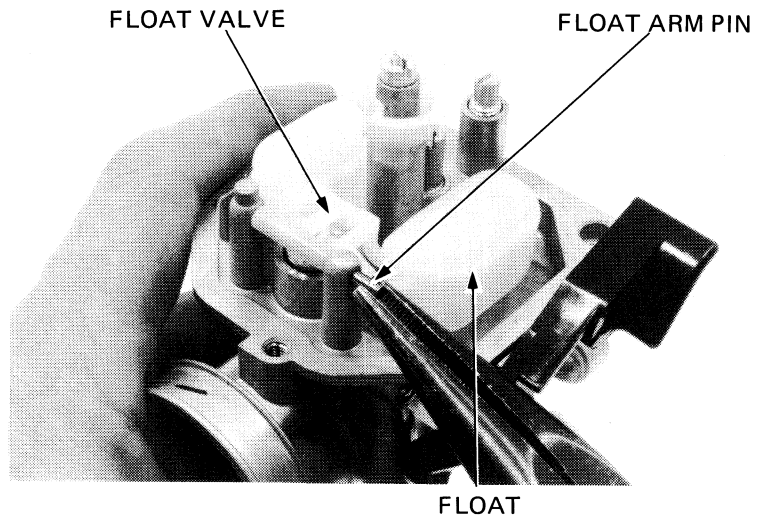

Inspect the float valve and seat for wear or damage.
Replace them as a set if wear or damage can be seen.

