

## ENGINE REMOVAL/INSTALLATION

### ENGINE REMOVAL


Drain the oil from the engine (Page 2-2).

Remove the seat.

Turn the fuel valve OFF, disconnect the fuel tube and remove the fuel tank (Page 4-3).


Shift the transmission to neutral.

Disconnect the battery negative cable at the battery.

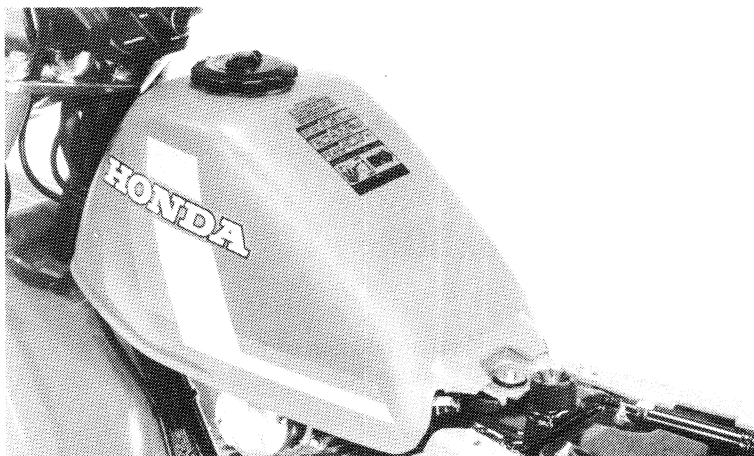

Disconnect the spark plug cap.

Remove the exhaust pipe (Page 13-3).

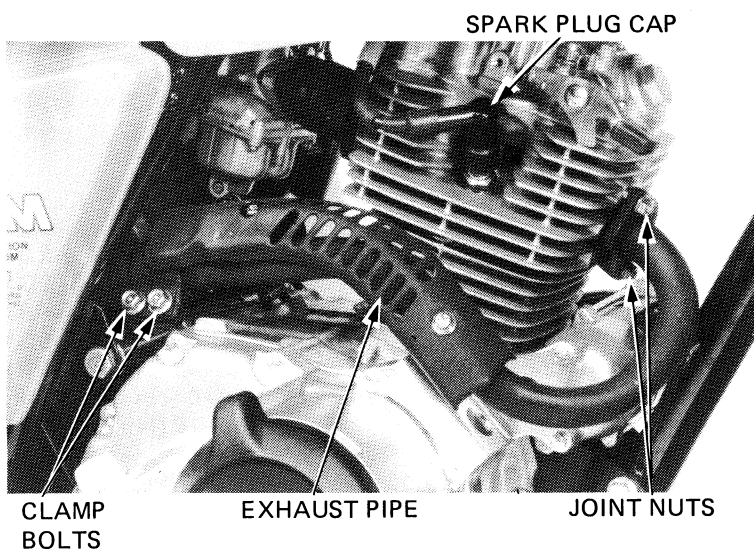

Disconnect the crankcase breather tube from the crankcase.

Disconnect the alternator coupler, pulse generator wires and starter cable.

Remove the carburetor (Page 4-6).

Disconnect the starter motor cable at the starter motor.

