


## CYLINDER HEAD/VALVES

Install the valve spring retainers and install the valve cotters.

### CAUTION

*To prevent loss of tension, do not compress the valve spring more than necessary.*


VALVE SPRING COMPRESSOR  
07757-0010000 or 07957-3290001

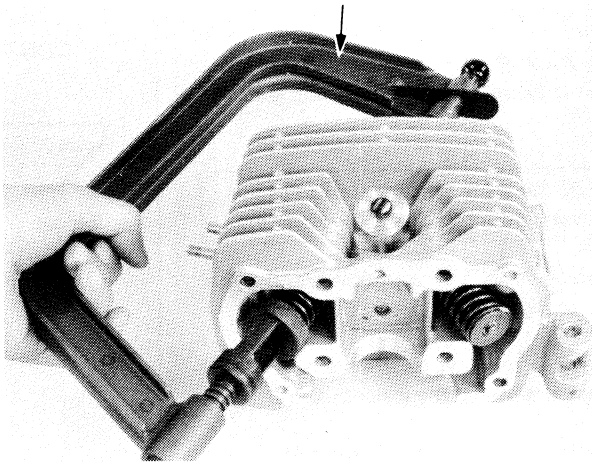

Tap the valve stems gently with a plastic hammer to firmly seat the cotters.

### CAUTION

*Support the cylinder head above the work bench surface to prevent possible valve damage.*

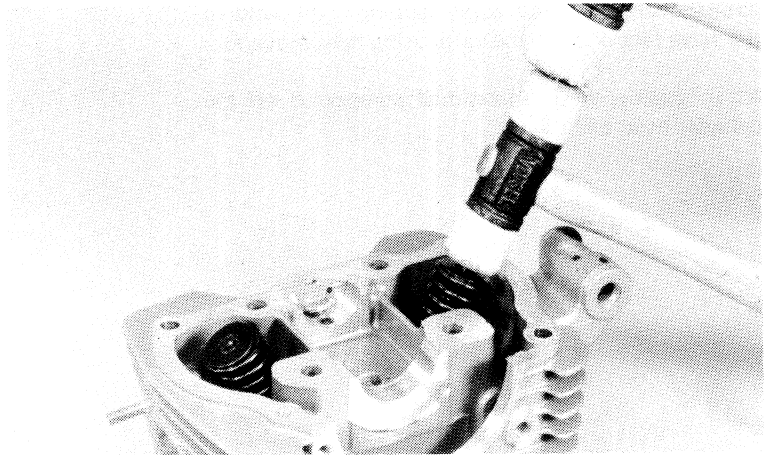

## CYLINDER HEAD INSTALLATION

Clean off any gasket material from the cylinder surface.

Install the O-rings, dowel pins and a new gasket.

