


INSTALLATION


Install the one-way clutch sprag into the centrifugal clutch drum.

Install the clutch center by turning it counterclockwise.

Install the centrifugal clutch drum aligning the clutch outer cutout with the drive gear on the clutch drum.

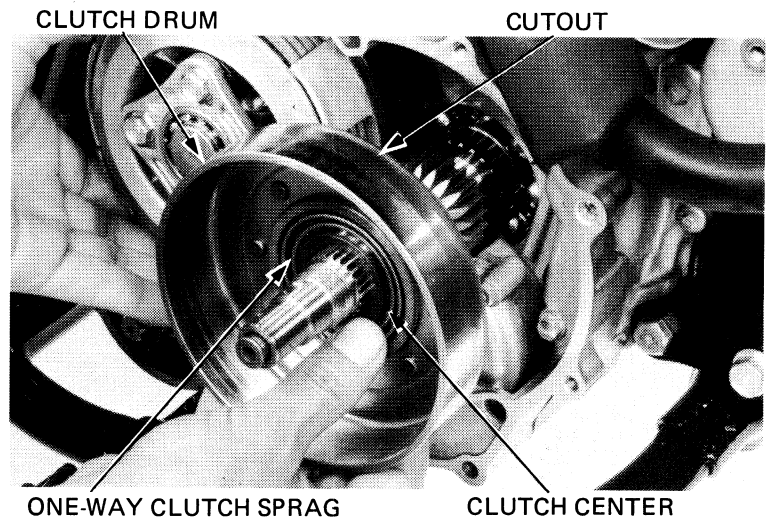

Install clutch plate B onto the clutch drum.

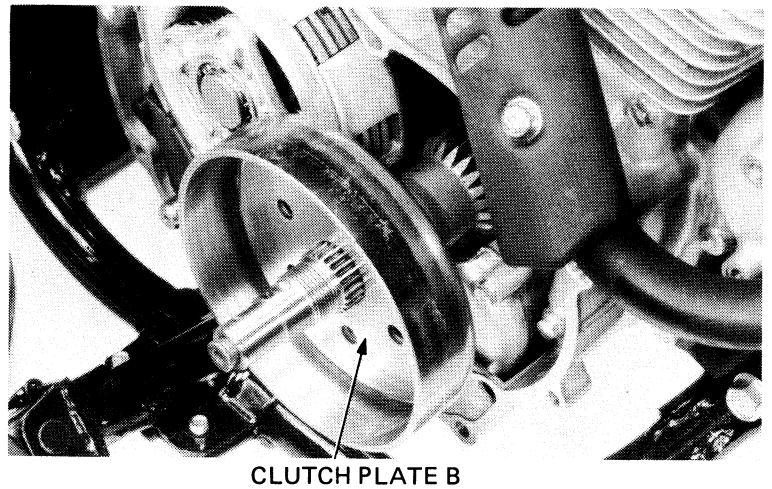

Attach the centrifugal clutch weights to the clutch hub with the links and clips.

