


GEARSHIFT LINKAGE

DISASSEMBLY


Remove the following.

- right crankcase cover (Page 8–3).
- centrifugal clutch (Page 8–6).
- manual clutch (Page 8–12).
- clutch lifter (Page 8–5).
- oil pump (Page 8–16).

Pull the gearshift spindle out of the crankcase.

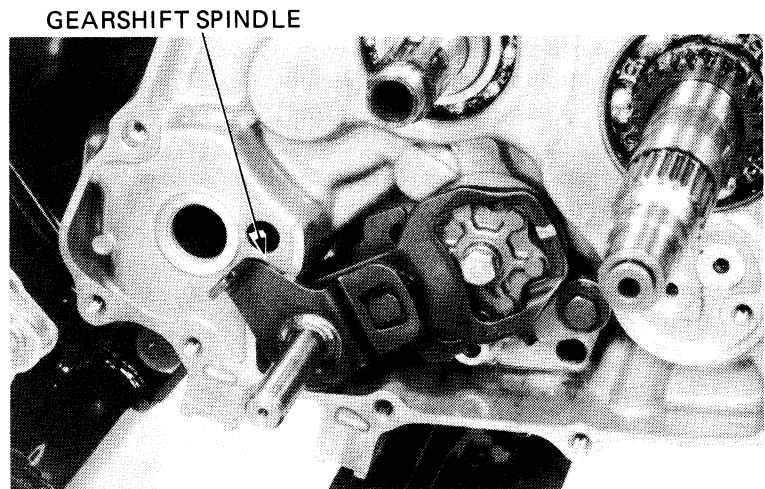

Remove the thrust washer, circlip and disassemble the gearshift spindle.

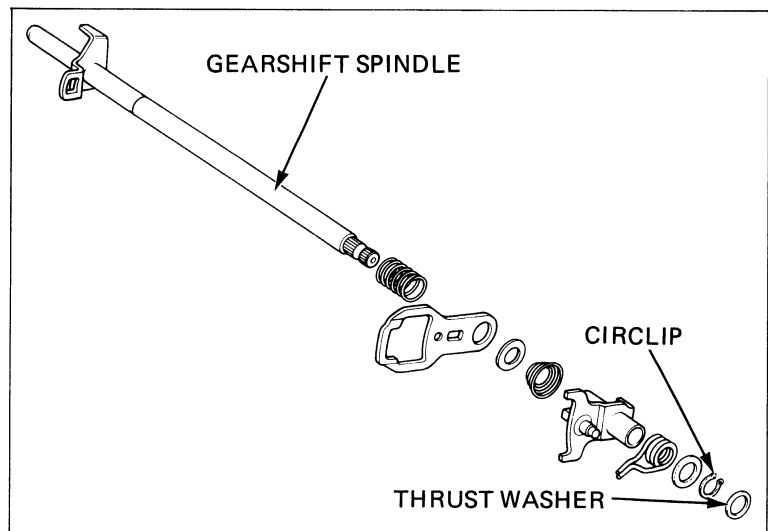

Remove the drum stopper plate and drum stopper arm.

