


RECOIL STARTER/ALTERNATOR/STARTER CLUTCH


RECOIL STARTER

REMOVAL

Shift the transmission into neutral.
Remove the gearshift pedal.

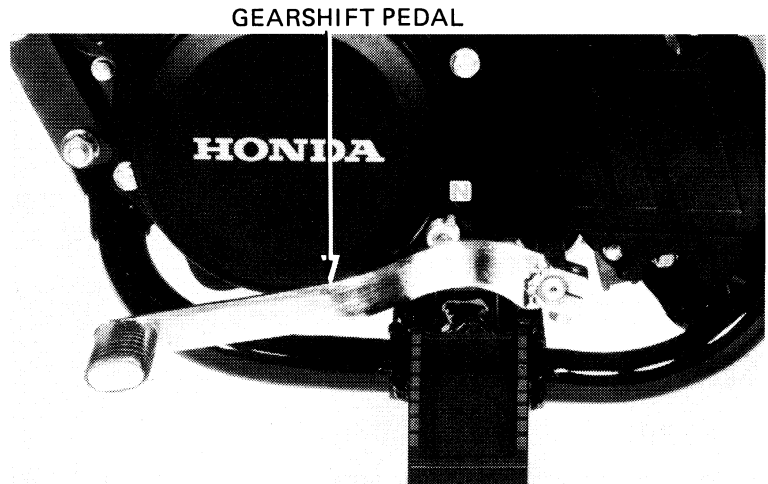

Remove the E-clip securing the neutral indicator and the indicator.
Remove the four recoil starter mounting bolts and the recoil starter.

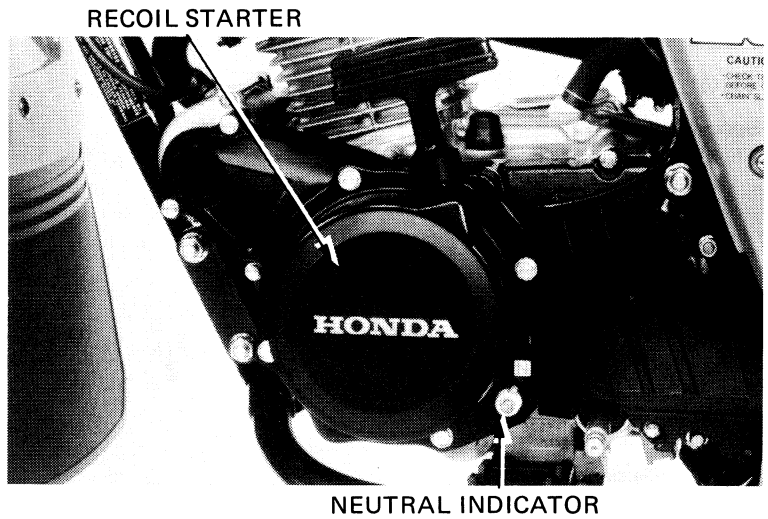

DISASSEMBLY

Remove the nut attaching the ratchet cover and cover.

