


TRANSMISSION ASSEMBLY

Coat all parts with oil.

Assemble the transmission shaft and gears noting the locations of the thrust washers and snap rings.

NOTE

Make sure the snap rings are seated properly.

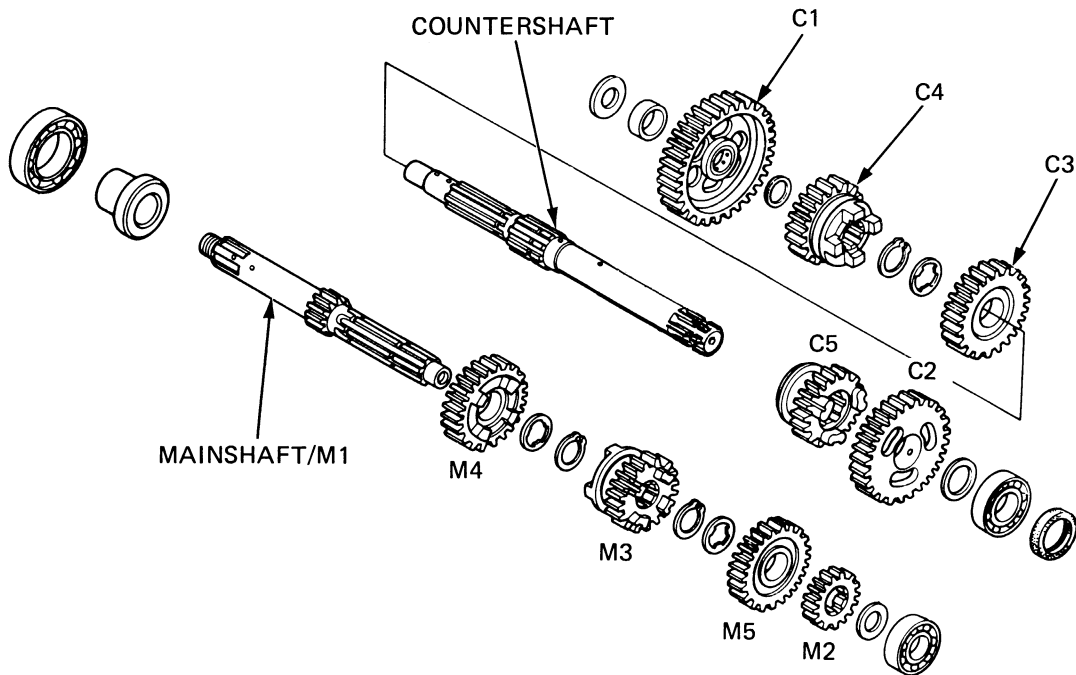

Install the mainshaft and countershaft assemblies into the right crankcase.

NOTE

Make sure the thrust washer stays in place during this operation.

