



FRONT WHEEL/SUSPENSION/BRAKE/STEERING

Install the axle side collar into the left dust seal.

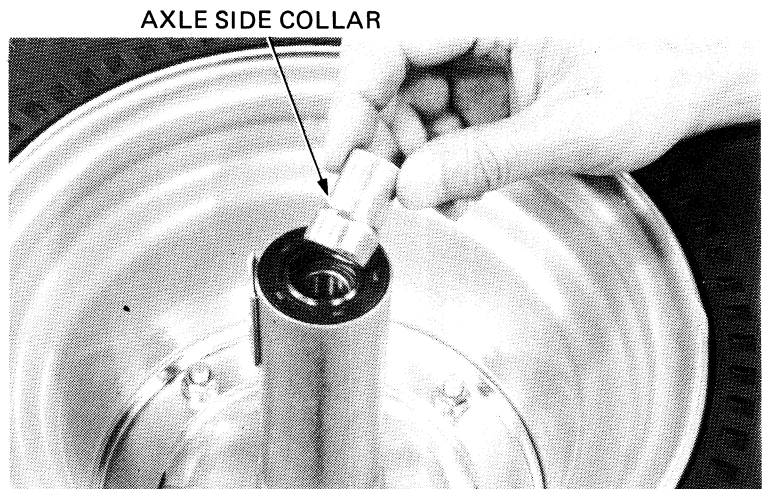

INSTALLATION

Fit the pin on the brake panel into the hole in the right fork leg.

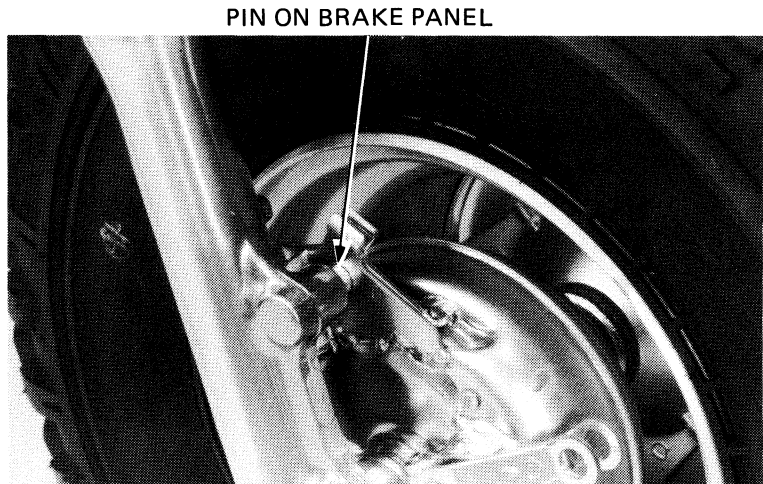

Clean the axle shaft and holder.
Install the holder with "UP" facing upwards.
Install the axle holder nuts but do not tighten at this time.

Tighten the axle to the specified torque.

TORQUE: 70–110 N·m
(7.0–11.0 kg-m, 51–80 ft-lb)

