

FRONT WHEEL/SUSPENSION/BRAKE/STEERING


Place the fork slider in a vise with soft jaws or a shop towel.
Apply a locking agent to the socket bolt threads and torque the bolt.

NOTE

Temporarily install the fork springs, seat washer, and fork tube cap to tighten the socket bolt.

TORQUE: 15–25 N·m
(1.5–2.5 kg·m, 11–18 ft·lb)

HEX WRENCH, 6 mm 07917–3230000
or commercially available in U.S.A.

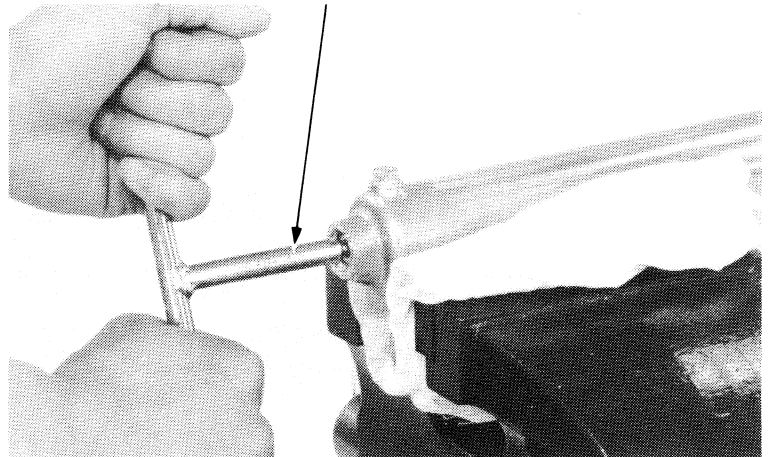


Coat a new oil seal with ATF and install it with the seal markings facing up.
Drive the seal in with the seal driver.

Install the snap ring into the groove of the slider.

Install the dust seal.

FORK SEAL DRIVER 07747–0010100

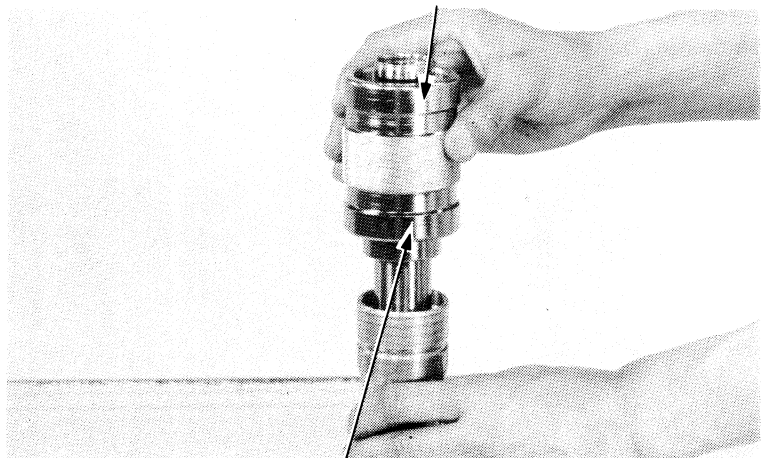

ATTACHMENT 07747–0010400

Pour in the specified amount of ATF.

FLUID CAPACITY: 88 cc (3.0 ozs)

Compress the front fork all the way and measure the oil level from the top of the tube.

NOTE

Be sure the oil level is the same in both fork tubes.

STANDARD OIL LEVEL: 137 mm (5.4 in)

