


Install the handlebar and upper holder (Page 11-3).
Tighten the handlebar lower holder nuts.

TORQUE: 40–48 N·m
(4.0–4.8 kg·m, 29–35 ft·lb)

Install the removed parts in the reverse order of
removal.

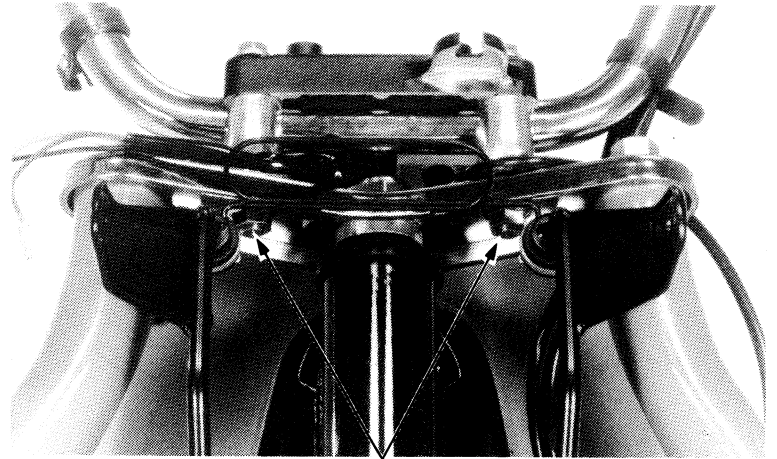

HANDLEBAR LOWER HOLDER NUTS