


REAR WHEEL/BRAKE/DRIVE MECHANISM


Remove the rear brake adjusting nuts and disconnect the brake cables from the brake arm. Remove the brake arm bolt, brake arm and indicator plate.

Remove the brake cam, return spring, dust seal and rubber seals.

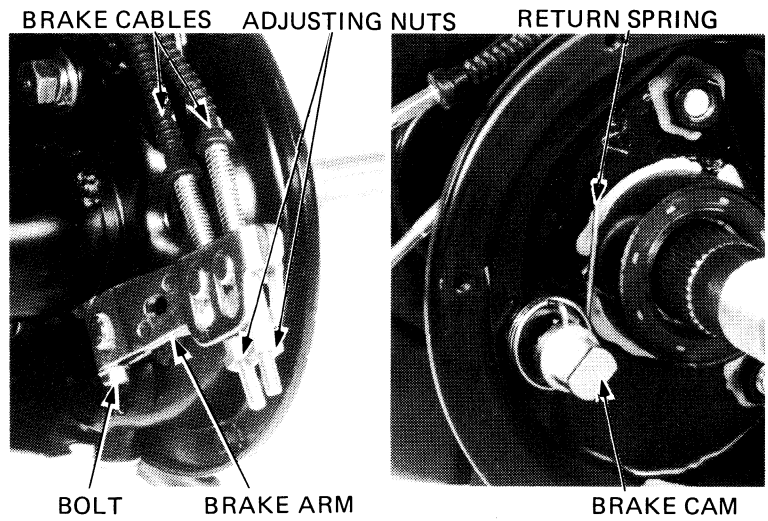

REAR BRAKE ASSEMBLY

Install new grease seals into the brake cam hole. Install the return spring. Apply grease to the anchor pin and brake cam and insert the brake cam into the hole.

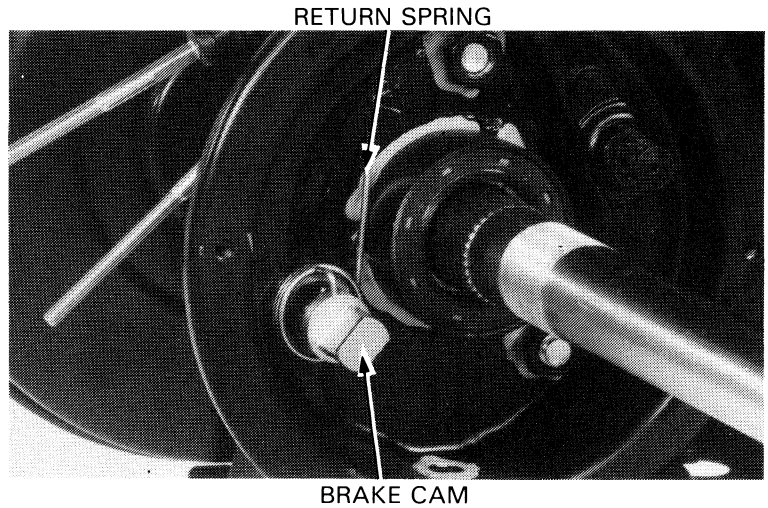

Insert the end of the return spring into the hole in the brake cam.

