

TROUBLESHOOTING

No power – key turned on:

1. Dead battery
 - Low fluid level.
 - Low specific gravity.
 - Charging system failure.
2. Disconnected battery cable.
3. Burned out fuse.
4. Faulty ignition switch.

Low power – key turned on:

1. Weak battery.
 - Low fluid level.
 - Low specific gravity.
 - Charging system failure.
2. Loose battery connection.

Low power – engine running:

1. Battery undercharged.
 - Low fluid level.
 - One or more dead cells.
2. Charging system failure.
3. Loose connection or short circuit in lighting system.

Intermittent power:

1. Loose battery connection.
2. Loose charging system connection.
3. Loose starting system connection.

Charging system failure:

1. Loose, broken, or shorted wire or connection.
2. Faulty voltage regulator.
3. Faulty alternator.