

17. LIGHTS/SWITCHES

SERVICE INFORMATION	17-1
TROUBLESHOOTING	17-1
HEADLIGHT	17-2
TAILLIGHT	17-3
NEUTRAL INDICATOR LIGHT	17-4
IGNITION SWITCH	17-5
HANDLEBAR SWITCHES	17-6
WIRING DIAGRAMS	17-7

SERVICE INFORMATION

GENERAL

- A continuity check can usually be made without removing the part from the ATC by simply disconnecting the wires and connecting a continuity tester or voltmeter to the terminals.

SPECIFICATIONS

Headlight	12 V 45/45 W
Taillight	12 V 5 W

TROUBLESHOOTING

Light does not come on when light switch is turned on (Engine is running)

1. Bulb burned out.
2. Faulty switch.
3. Wiring to that component has open circuit.

Headlight beams do not shift when hi-lo switch is operated

1. Faulty dimmer switch.
2. Bulb burned out.
3. Wiring to that component has open circuit.