


To adjust the idle speed, if desired, warm up the engine and push the choke/idle speed knob down to the close position. Turn the choke/idle speed knob clockwise to decrease engine speed, or counterclockwise to increase engine speed.

NOTE

For a stable idle speed, turn the choke/idle speed knob at least 4 turns (24 clicks) counterclockwise from the fully seated position.

Test the adjustment by accelerating away from a slow corner. Readjust as necessary.

CHOKE/IDLE SPEED KNOB

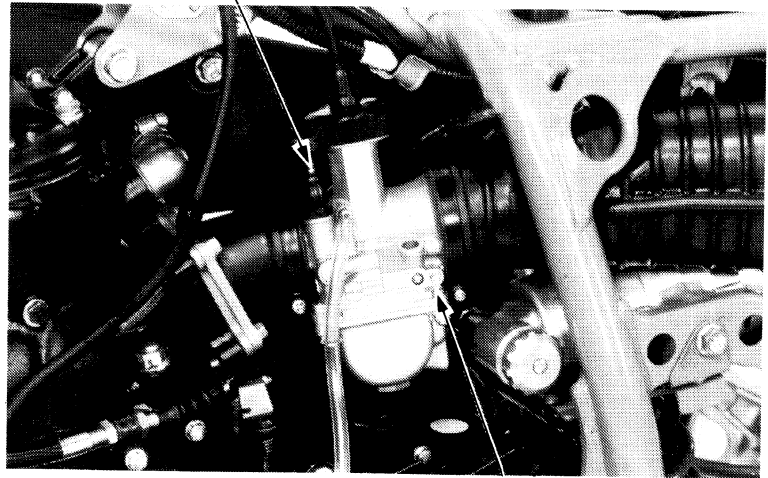

AIR SCREW