


CYLINDER HEAD/CYLINDER/PISTON


Check the cylinder head for warpage in diagonal directions with a straight edge and a feeler gauge.

SERVICE LIMIT: 0.05 mm (0.002 in)

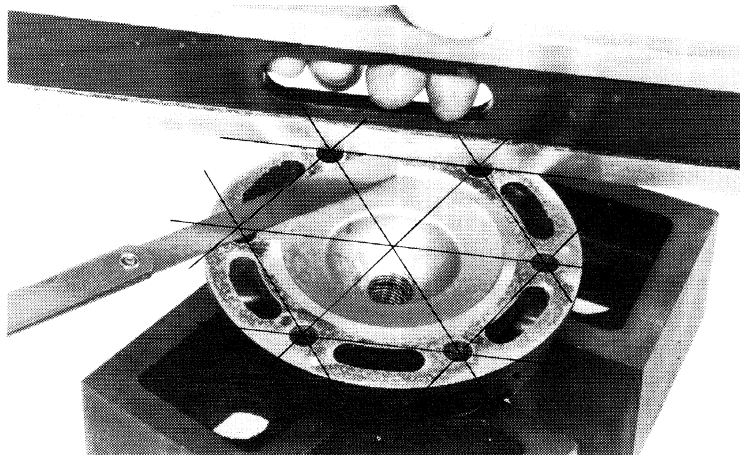

INSTALLATION

Install a new cylinder head gasket with its tab facing the rear.

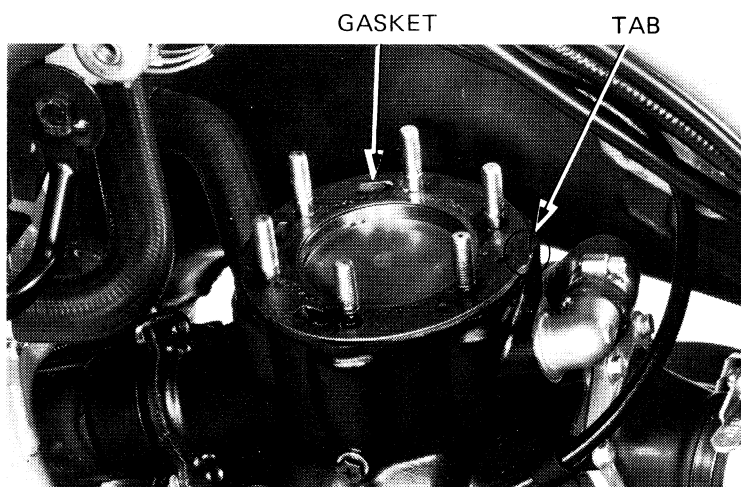

Place the cylinder head on the cylinder.
Install the seven cylinder head nuts and tighten to the specified torque in a criss-cross pattern in 2 to 3 steps.

TORQUE: 24–29 N·m
(2.4–2.9 kg·m, 17–21 ft·lb)

