

REAR SUSPENSION

DISASSEMBLY


Hold the lower shock mount in a vise with soft jaws or a shop towel.
Loosen the lock and adjusting nuts.

CAUTION

Be careful not to damage the hose connection in a vise.


NOTE

The pin spanners are optional tools.

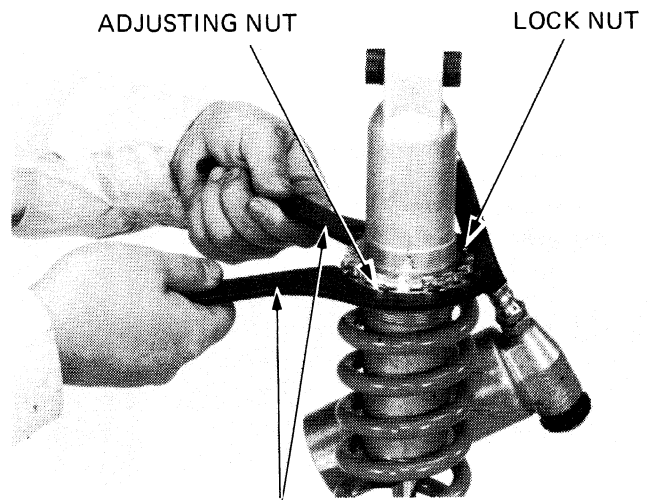

PIN SPANNER 89201-KA4-820, AND 89202-KA4-820

Remove the spring seat, stopper and spring.

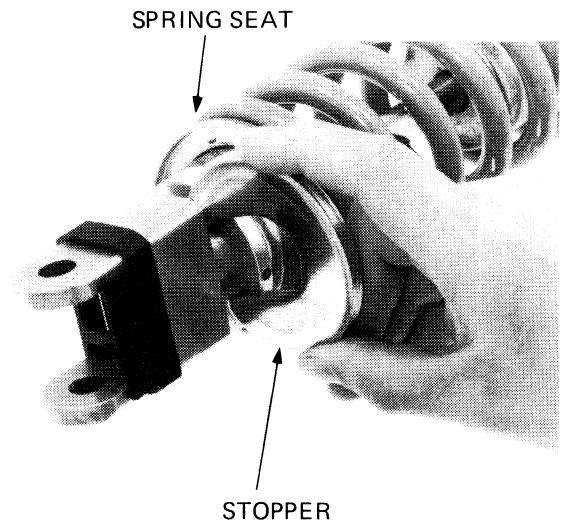

INSPECTION

Measure the spring free length.

SERVICE LIMIT: 252.1 mm (9.93 in)

