



CLUTCH/OIL PUMP/KICK STARTER

Remove the gasket and dowel pins.

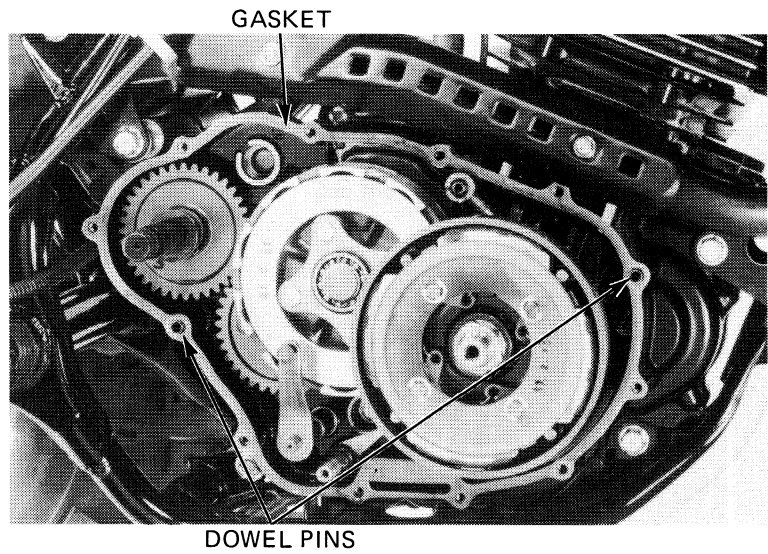

CLUTCH LIFTER DISASSEMBLY

Remove the clutch adjuster rubber cap.
Remove the clutch adjusting screw, lock nut and washer.

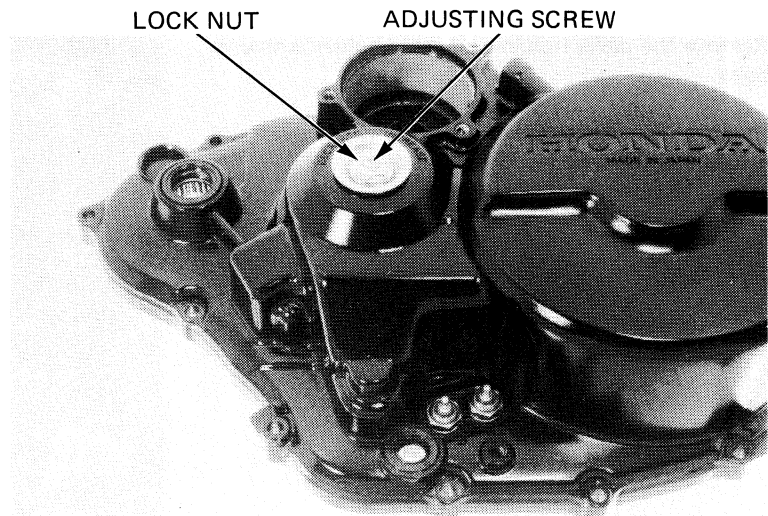

Remove the clutch lifter lever stay mount bolts,
lifter lever and spring.

