



CLUTCH/OIL PUMP/KICK STARTER

Remove the kick starter spindle from the crankcase boss and free the return spring.

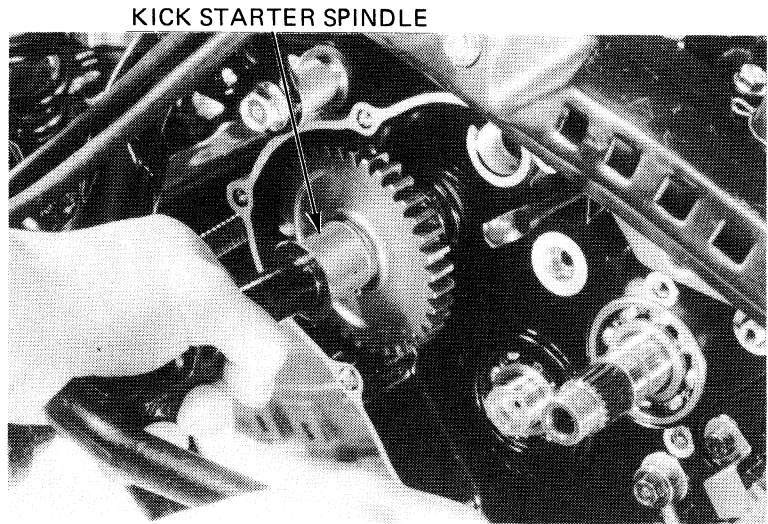

Remove the washer, collar, starter return spring, spring retainer ratchet and ratchet spring.

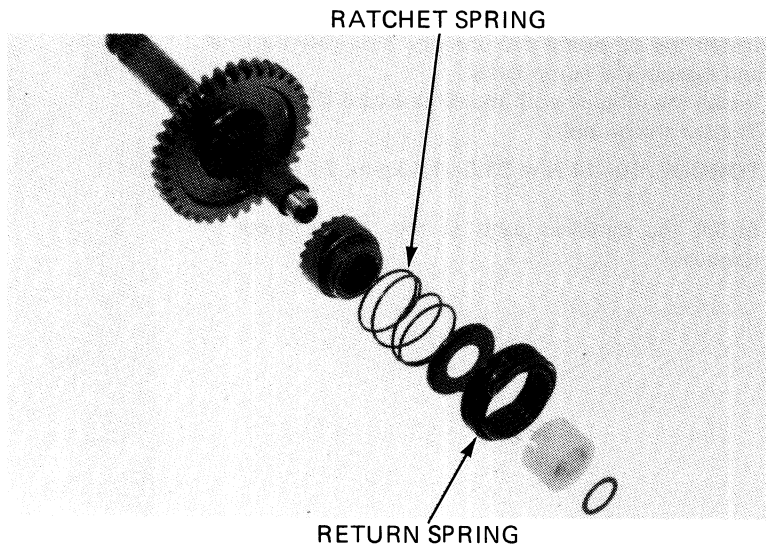

Remove the circlip and disassemble the pinion gear and washers.

