


FRONT WHEEL/BRAKE/SUSPENSION/STEERING

Screw in the breaker arm compressor bolt to break the bead from the tire.

If the rest of the bead cannot be pushed down into the center of the rim, remove and reposition the compressor and arm $1/8$ to $1/4$ the circumference of the rim. Tighten the compressor bolt to break the bead. Repeat this procedure as necessary until the remainder of the bead can be pushed down into the center of the rim.

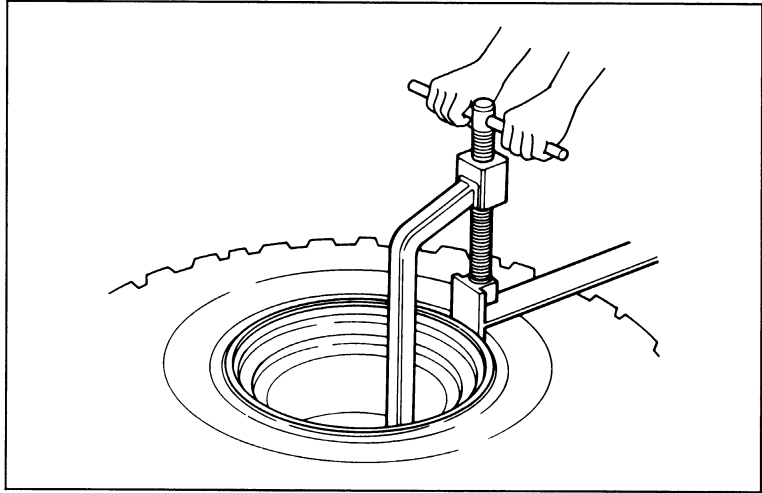

If the bead breaking is difficult with the narrow end (A side) of the breaker arm, use the wide end (B side) of the arm and repeat the procedure above.

